

TOR MINI



User Guide

STEINER 
Nothing Escapes You

TOR Mini

Welcome to the TOR Mini weapon-mounted laser pointer! From the company that brings you world-class tactical lasers and optics, the TOR Mini features a red or green laser for spot-on accuracy.

Features

- Rugged military-grade aluminum housing
- Left/right pressure pads
- Auto-on function when drawn
- Adjustable laser power
- Water resistant
- Fits common holsters

This powerful weapon-mounted laser ensures
Nothing Escapes You!



TOR Mini At-A-Glance

Feature	Description
Activation Options	Multiple modes of laser operation
Housing	Durable, Hard Anodized Machined Aluminum Housing and Rail Mount
Color	Black
Adjustable	Windage and Elevation Laser Brightness
Mounting	Rail Mount
Battery Type	1/3N
Environmental Conditions	Water resistant Dust Proof
Part Numbers	Green laser: 7003 Red laser: 7006

Included with your purchase of a TOR Mini:

- One 1/3N battery
- 5/64 Allen wrench
- Caution and aperture labels
- User guide

Important Warnings

Failure to read and follow these operating instructions and warnings may result in serious injury, damage to property, or death.

Firearm Safety

Prior to installing the TOR Mini, ensure the firearm is unloaded and the magazine is removed.

Always follow these safety rules when handling a firearm:

- Always treat a firearm as if it were loaded.
- Store your firearm so that children cannot gain access to it.
- Always point the gun in a safe direction, away from anything you do not want to destroy.
- Keep your finger off the trigger until you are ready to fire.
- Be aware of your surroundings, target and what is beyond.

Laser Safety Precautions

The TOR Mini features either a green or red laser pointer, depending on the unit purchased.

The caution and aperture labels are applied to the TOR for your convenience.

CAUTION: The TOR Mini contains a Class 3R laser capable of causing permanent eye injury.

- DO NOT stare into the laser beam.
- DO NOT look into the laser beam through binoculars or telescopes.
- DO NOT point the laser beam at mirror-like surfaces.
- DO NOT shine the laser beam into other individual's eyes.


Red Laser Caution Label



Aperture Label



Green Laser Caution Label

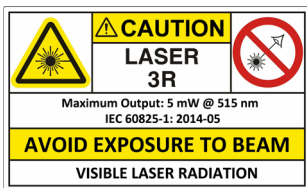

Battery Warning

WARNING: FIRE, EXPLOSION, BURN HAZARD

The TOR Mini is powered by one 1/3N battery.

The following safety precautions apply when handling lithium batteries:

- DO NOT short circuit, puncture, or disassemble a battery.
- DO NOT attempt to recharge a battery.
- NEVER dispose of batteries in a fire, or in any way expose batteries to excessive heat.
- Batteries may explode if disassembled, crushed, recharged, or exposed to high temperatures.
- Prior to use, inspect all batteries for cracks, leakage, or bulging.
- NEVER install a defective battery in the TOR Mini.
- Store batteries at room temperature.
- Refer to applicable federal, state, and local laws and regulations for proper disposal of the batteries.

Getting Started

TOR Mini Laser Specifications	
Center Wavelength	Green laser: 520 +/-10 nm Red laser: 635 +/-5 nm
Beam Dot Size	0.50 inches at 50 feet
Maximum Power Output	Laser: <5 mW
Weight (with battery)	2.12 oz. (60.0 g)
Size	2.1 x 1.3 x 1.2 in. (5.3 x 3.3 x 3.0 cm)

Battery Installation


Follow all firearm safety precautions before installing the battery.

1. Unscrew the battery cap.
2. Place a new battery into the unit with the negative terminal (-) in first.
3. Using a coin or your fingers, firmly tighten down the battery cap.

The green and red lasers are direct diode lasers capable of extreme cold weather operation. The constant power drive circuit ensures that the laser output remains constant throughout the life of the battery.

Low Battery Indication

When the battery gets low, the TOR Mini's laser will step down in power and slowly flash before turning off completely. Replace the battery when this occurs.

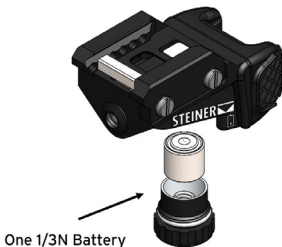

Rail Mounting

IMPORTANT: Unload the firearm and remove the magazine before mounting the TOR Mini.

The rail mount on the TOR Mini will fit pistols that have a Picatinny or Weaver style rail forward of the trigger guard.

Follow these steps to mount the TOR Mini to the rail:

1. Using a flathead screwdriver, fully loosen the captive screws.
2. Pull back the clamp bar.
3. Position the rail bar to fit the weapon's rail.
4. Once the best rail position is found, ensure the rail bar pins are inserted in the clamp bar in your preferred position. There are 6 rail positions to choose from.
5. Tighten down the screws until snug.

Operating the TOR Mini

Always operate the TOR Mini with the mount facing up.

Turn On

- Press right or left pressure pad to turn the laser on.

Turn Off

- Press and release right or left pressure pad to turn the laser off.

Note: If the TOR Mini laser is left on, it will shut off automatically after 5 minutes to conserve battery power.

Adjust brightness

- Press and hold right or left pressure pad. The TOR Mini cycles through low, medium, and high brightness.
- Release the pressure pad when the brightness level you want is reached.

The TOR Mini will remember the setting even if the batteries are removed and replaced.



Pressure Pads


Windage and Elevation Adjustment

The TOR Mini is pre-sighted at the factory. It may not be necessary for you to adjust the factory settings.

However, differences in the alignment of your handgun's rail to its bore can result in the laser aim point being off target. Verify the boresight and adjust, if necessary, every time the TOR Mini is mounted to a weapon.

The TOR Mini has one screw for windage adjustment and one screw for elevation adjustment. Use the 5/64 Allen wrench provided in the box to make adjustments.

Elevation Adjuster

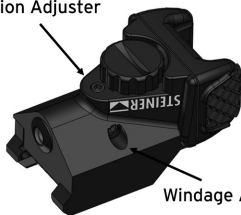

Windage Adjuster

Adjust the laser beam using windage and elevation screws

- To move the beam spot down, turn the elevation screw clockwise.
- To move the beam spot up, turn the elevation screw counterclockwise.
- To move the beam spot to the right, turn the windage screw clockwise.
- To move the beam spot to the left, turn the windage screw counterclockwise.

DO NOT over-torque the screws. It can damage the internal laser module.

When the laser spot cannot move further, stop turning the adjustment screw.

Turn on Auto On

The TOR Mini can be set to turn on automatically when you raise or draw your weapon. This mode is ideal for training.

With the TOR Mini mount facing UP, do the following:

1. Turn the TOR Mini on using the right or left pressure pad.
2. Within 5 seconds, fully press and release the activation pads in this pattern:

Left - Right - Left - Right

- If you take more than 5 seconds to press the pressure pads in this order, the Auto On feature will not work.
 - After the sequence is completed, the TOR Mini flashes to indicate that the Auto On feature is activated.
3. Turn the unit off using the right or left pressure pad.

4. Point the TOR Mini at the ground (if weapon-mounted, point the muzzle straight at the ground). Keep the TOR Mini in this position for more than 1 second. This is the **INACTIVE ZONE**.
5. Raise the TOR Mini or your weapon to a shooting position. The laser displays. This is the **ACTIVE ZONE**.

If the TOR Mini goes untouched for more than 10 minutes, the Auto On feature is disabled to conserve battery life.

To turn off the Auto-On feature, with the TOR Mini ON and mount facing UP, do the following:

1. Turn the TOR Mini on using the right or left pressure pad.
2. Within 5 seconds, fully press and release the activation pads in this pattern:
Left - Right - Left - Right
3. After the pads are pressed, the TOR Mini flashes to indicate that the Auto On feature is deactivated.

Maintenance

- Never use strong cleaning fluid or solvents.
- Do not use liquid cleaners inside the battery compartment.
- Keep the lens of the laser clean. Clean with alcohol and a cotton swab. A dirty lens will affect beam quality.
- ALWAYS remove the TOR Mini before cleaning your weapon.

Warranty and Repair

Steiner Optics, Inc. warrants its products against defects in workmanship and materials for a period of two years from the date of purchase. Warranty is void if the product has been abused, misused, neglected, or disassembled prior to the return to the manufacturer.

This warranty does not cover loss, theft, deliberate damage, or cosmetic damage that does not hinder the performance of the product.

If you are experiencing any problems with your Steiner TOR product, please first review the manual for tips and information.

To return the TOR Mini for repair, please contact Steiner Optics at www.steiner-optics.com.



Steiner Optics
331 East 8th St.
Greeley, CO 80631
Tel: (888) 550-6255
www.steiner-optics.com